

FM/Cable TV Distribution Amplifier Instruction Sheet

CM-3411

Channel Master

CM-3411

1-Port FM Antenna/Cable
Distribution Amplifier



Contents:

- Amplifier
- Power Supply
- Coaxial Cable Jumper
- Instruction Sheet

Scan for Tech Support




www.channelmaster.com/support

Optional Configuration; The FM Antenna/Cable TV Distribution Amplifier CM-3411 can be installed in a location without access to power. This option will require accessories that are sold separately. The (Bottom Right) output port on the FM Antenna/Cable TV labeled "DC Power IN" will output the amplified antenna signal while simultaneously allowing power to be input into the amp over the same coaxial cable. To use the remote powering method option will require a compatible accessory, CM-3400XPIPS or CM-7777XPI (sold separately).

For Product Warranty information please visit us
online at www.channelmaster.com/warranty

Instructions

1. Connect the coaxial cable from the antenna to the "RF IN" port on the amplifier.
2. Connect included coaxial cable between the "DC POWER IN" port on the amplifier (Top Right) and the included power supply's coaxial port.
3. Connect the coaxial cable(s) from the "OUT" port(s) to the television set, set-top box, or tuning device.
4. Plug in the power supply to an AC voltage source.
Installation is complete.

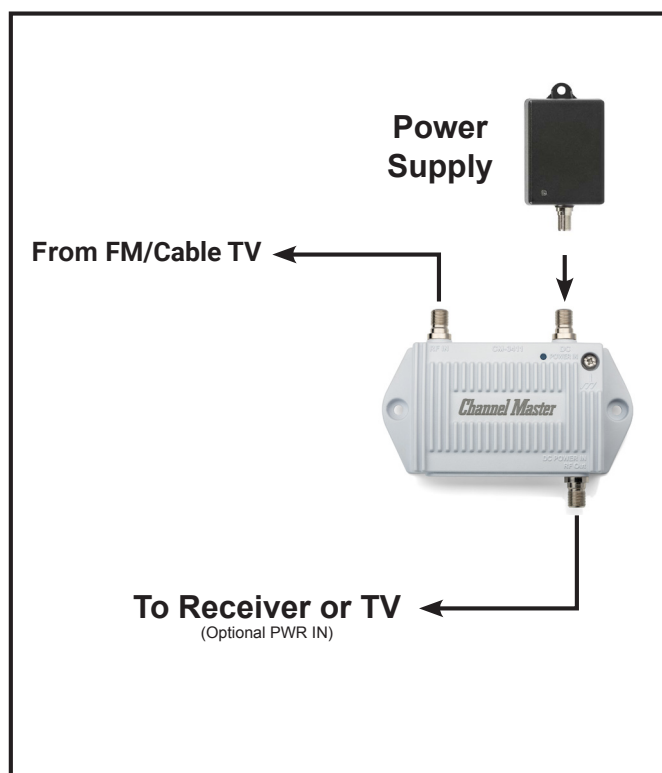

Installation Instructions



PROFESSIONAL GRADE



TV ANTENNAS & ACCESSORIES

SINCE 1949

Channel Master