

Antenna Distribution Amplifiers

Instruction Sheet

Hoja de instrucciones de la herramienta de compresión del conector / Outil de compression de connecteur Fiche d'instructions

Channel Master

CM-3422, 3424, 3428

CM-3422

2-Port TV Antenna Booster

Amplificador de 2 puerto

Amplificateur 2 port



CM-3424

4-Port TV Antenna Booster

Amplificador de 4 puerto

Amplificateur 4 port



CM-3428

8-Port TV Antenna Booster

Amplificador de 8 puerto

Amplificateur 8 port



Contents:

All TV Antenna Boosters include:

- Amplifier
- Power Supply
- Coaxial Cable Jumper
- Instruction Sheet

Instructions




1. Connect the coaxial cable from the antenna to the "ANTENNA IN" port on the amplifier. (see Fig 1, 2, & 3)
2. Connect included coaxial cable between the "DC POWER IN" port on the amplifier (Top Right) and the included power supply's coaxial port. see Fig 1, 2, & 3)
3. Connect the coaxial cable(s) from the "OUT" port(s) to the television set, set-top box, or tuning device.
4. Plug in the power supply to an AC voltage source.

Instrucciones

1. Conecte el cable coaxial de la antena al puerto "ANTENNA IN" del amplificador. Vea las figuras 1, 2, 3.
2. Conecte el cable coaxial incluido entre el puerto "DC PWR IN" del amplificador (arriba a la derecha) y el puerto coaxial de la fuente de alimentación incluida. (ver Fig. 1, 2, 3)
3. Conecte el (los) cable (s) coaxial desde el (los) puerto (s) "OUT" al televisor, decodificador o dispositivo de sintonización.
4. Enchufe la fuente de alimentación a una fuente de voltaje CA.

Instructions

1. Connectez le câble coaxial de l'antenne au port « ANTENNA IN » de l'amplificateur. Voir les figures 1, 2, 3.
2. Connectez le câble coaxial fourni entre le port « DC PWR IN » de l'amplificateur (en haut à droite) et le port coaxial de l'alimentation fournie. (voir Fig 1, 2, 3)
3. Connectez le(s) câble(s) coaxiaux du ou des ports « OUT » au téléviseur, au décodeur ou au dispositif de réglage.
4. Branchez l'alimentation à une source de tension CA.

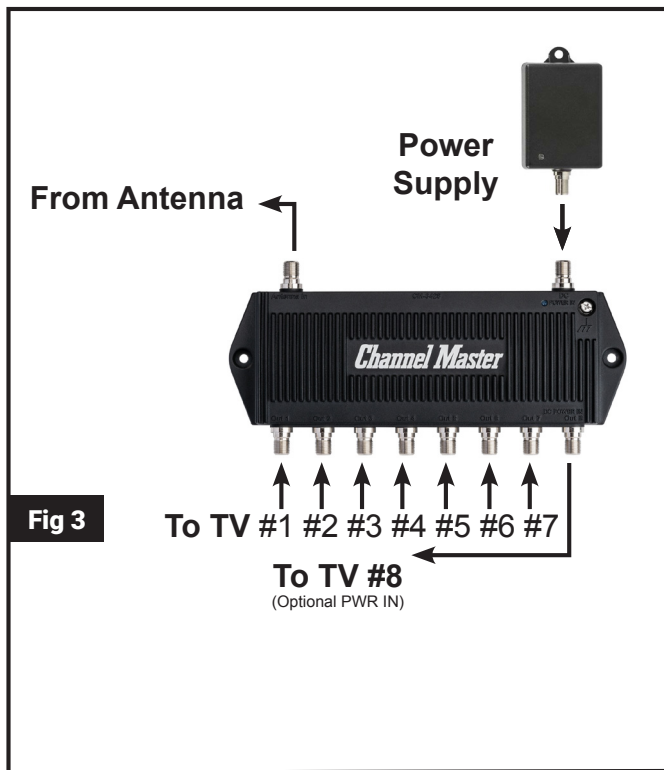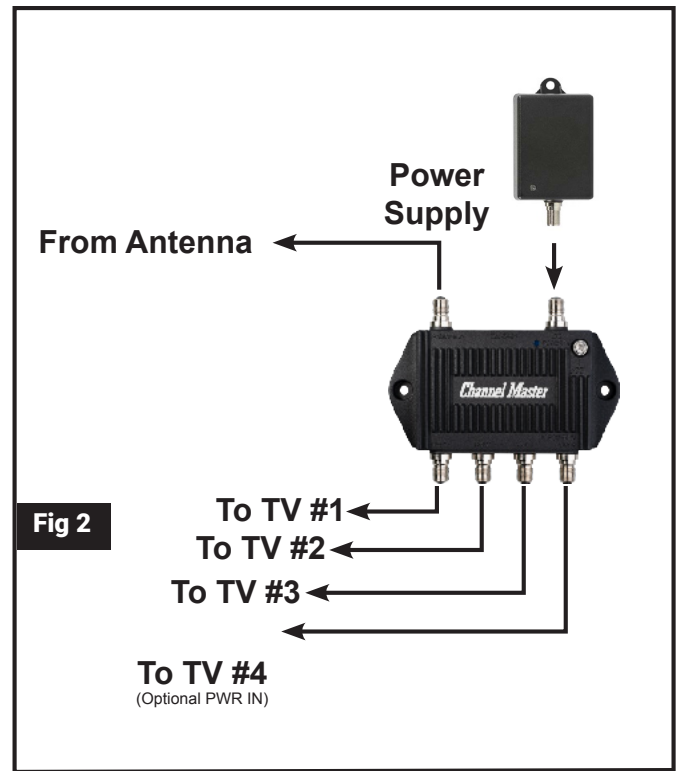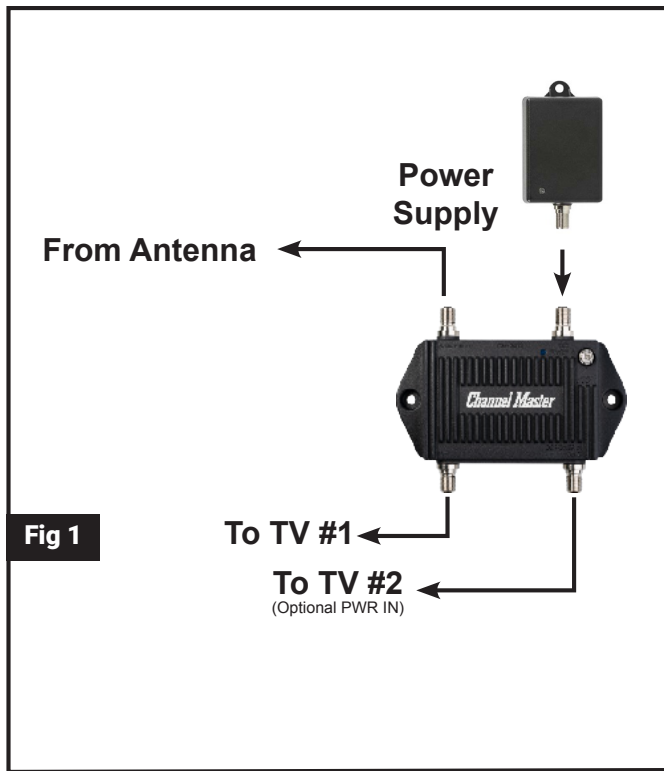

Scan for Tech Support



www.channelmaster.com/support

Optional Configuration; The TV Antenna Booster Distribution Amplifier CM-3422, 3424, 3428 can be installed in a location without access to power. This option will require accessories that are sold separately. The (Bottom Right) output port on the TV Antenna Booster labeled "DC Power IN" will output the amplified antenna signal while simultaneously allowing power to be input into the amp over the same coaxial cable. To use the remote powering method option will require a compatible accessory, CM-3400XPIPS or CM-7777XPI (sold separately). See Fig 1, 2, 3. For an example of the remote power option.

For Product Warranty information please visit us online at www.channelmaster.com/warranty