


Channel Master

CM-3098XSPA

Instruction Sheet

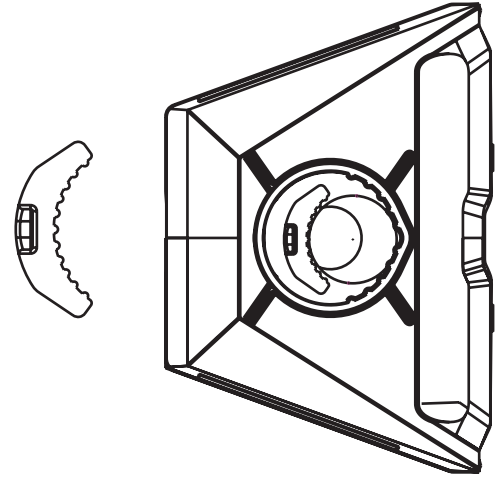


Step 1: Remove the Kickstand or Mount from the Starlink Dish.

- Lift the bottom section of the kickstand to unseat the two tabs from their recessed slots, as shown in **Figure 1**.
- Slide the kickstand down and away from the Starlink Dish to remove it, as shown in **Figure 2**.

Fig. 1



Fig. 2

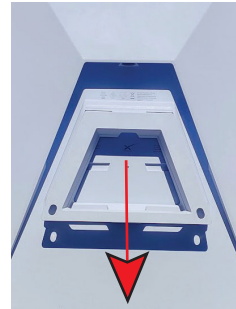

Step 2: Route the Starlink Cable Through the Adapter.

Option A: Route Cable Through the Pole

- Feed the cable up through the pole or mast.
- Route the cable through the center of the adapter as shown in **Figure 3**.
- Connect the cable to the Starlink Dish. Ensure the connector clicks into the port on the dish and is weather-sealed by the rubber boot on the connector.

Option B: Route Cable on the Outside of the Pole

- Feed the cable through the slot in the adapter as shown in **Figure 4**.
- Connect the cable to the Starlink Dish. Ensure the connector clicks into the port on the dish and is weather-sealed by the rubber boot on the connector.

Fig. 3



Fig. 4



ChannelMaster.com

© 2024 Channel Master. Channel Master is a registered trademark. Specifications subject to change. All rights reserved. © 2024 Channel Master. Channel Master es una marca registrada. Especificaciones sujetas a cambio. Todos los derechos reservados. © Channel Master, 2024. Channel Master est une marque déposée. Les caractéristiques peuvent être modifiées sans préavis. Tous droits réservés. Pub_CM-3098XSPA_2024


Channel Master

Instruction Sheet

Step 3: Secure the Adapter to the Dish

- Slide the adapter up onto the dish until the tabs click into place, as shown in **Figure 5**.

Fig. 5

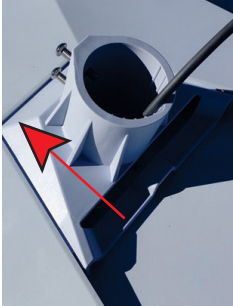

Step 4: Secure the Adapter to the Mast/Pole

Option A (For Poles with a Diameter Less Than 1.5")

- Place the included plastic insert on the top of the pole as shown in **Figure 6**.
- Slide the adapter onto the pole and align the dish into the correct orientation as shown in **Figure 7**.
- Use the included Allen wrench to tighten the two set screws, ensuring the groove on the plastic insert lines up with the set screws. Do not over-tighten; the full length of the screws does not need to be utilized.

Fig. 6



Fig. 7



Option B

- Slide the adapter onto the pole and align the dish into the correct orientation as shown in **Figure 8**.
- Use the included Allen wrench to tighten the two set screws. Do not over-tighten; the full length of the screws does not need to be utilized.

Fig. 8



MORE INFORMATION

Additional product information including videos and frequently asked questions is available at www.channelmaster.com/support

Warranty Information is available online at www.channelmaster.com/warranty

www.channelmaster.com

Rooftop Installation Warning!

Use caution when installing antennas and accessories on a rooftop, near power lines and electrical equipment. Stay away from power lines. If you or the antenna comes in contact with power wires or other electrical equipment you could be at risk of serious injury or even death. If any part of the antenna should come in contact with a power line, call your local power company for assistance, DO NOT TRY TO REMOVE IT YOURSELF. If you are concerned about nearby power lines coming in contact with you or your antenna during installation, please contact a professional installer and/or your power company for assistance.